

INSTRUCTIONS

FOR THE PRES-N-SNAP

INSTALLING FASTENERS

FIRST MAKE SURE THAT YOU HAVE THE CORRECT DIES FOR THE BRAND OF FASTENERS THAT YOU ARE USING.

REMOVING AND INSTALLING DIES ON THE PRES-N-SNAP IS ACCOMPLISHED BY PULLING THE DIES OFF OF THE TOOL, OR PUSHING THE DIES ONTO THE TOOL. IT HELPS TO ROTATE/TWIST THE DIES DURING INSTALLING AND THE REMOVAL OF DIES. ALL DIES ARE HELD ONTO THE TOOL BY BLACK "O" RINGS.

WITH THE HANDLE CLOSED, ADJUST THE END BOLT UNTIL THE DIES COME IN CONTACT, THEN BACK-OFF 1/2 TURN. PLACE THE FASTENERS INTO THEIR CORRESPONDING DIES.

LOCATE A PIECE OF SCRAP FABRIC AND FOLD TO THE SAME THICKNESS AS YOUR PROJECT. PLACE THE FABRIC BETWEEN THE DIES AND PRESS/SQUEEZE THE HANDLE. FASTENERS SHOULD NOT ROTATE WHEN SET IN FABRIC. CAUTION: OVERTIGHTENING MAY CAUSE DISTORTION TO THE FASTENERS AND CAN DAMAGE THE DIES.

IN THE EVENT THAT THE FASTENER ROTATES YOU MAY ADJUST THE END BOLT CLOCKWISE ON THE PRES-N-SNAP. REMOVE THE M-2700 GRAY RING TO PREVENT CUTTING IT. THEN CAREFULLY PRESS/SQUEEZE THE HANDLE BEING CERTAIN THAT THE FASTENER IS IN POSITION.

INSTALLING GROMMETS / EYELETS

FOR INSTALLING GROMMETS USE THE SAME PROCESS AS FOR INSTALLING FASTENERS.

IF YOU ARE USING A STANDARD OR SPUR GROMMET YOU WILL NEED TO CUT/PIERCE A HOLE THROUGH ALL LAYERS OF MATERIAL AT ONE TIME. PLACE THE GROMMET THROUGH THE HOLE AND THE WASHER ON IT. WHILE HOLDING IT IN ONE HAND USE THE OTHER HAND TO POSITION THE PRES-N-SNAP AND PRESS/SQUEEZE THE HANDLE. THE GROMMET SITS ON THE ANVIL PORTION OF THE DIE SET AND THE WASHER SITS ON THE ROLLING PORTION. IF YOU ARE NOT SURE WHICH IS THE ANVIL AND ROLLING PORTION, PLEASE GO TO PAGE 3 TO VIEW.

IF YOU HAVE SELF-PIERCING GROMMET DIES DO NOT WASTE TIME CUTTING/PIERCING A HOLE IN THE FABRIC. THE GROMMET AND GROMMET DIE WILL CUT AND ROLL IN ONE ACTION SAVING YOU TIME AND MONEY. WHEN PLACING THE GROMMET AND WASHER IN THE DIES, IT HELPS TO PLACE THE WASHER FIRST THEN THE GROMMET.


HAMMER HAND TOOLS

WHEN USING PUNCH TOOLS ALWAYS WEAR SAFETY GLASSES.

ALWAYS HAMMER INTO THE END GRAIN OF A SOLID PIECE OF WOOD, NEVER INTO THE SIDE OF THE WOOD FOR IT WOULD JAM WOOD INTO THE CUTTING PUNCH AND CAUSE DAMAGE TO YOUR TOOL.

Pres-N-Snap Dies

HERE IS A SAMPLE OF OUR BASIC DIES

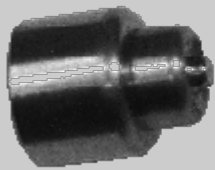


SOCKET DIE



BUTTON/CAP DIE



STUD DIE

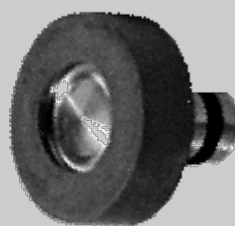

EYELET DIE



ROLLING DIE



ANVIL DIE

#1 GROMMET DIE

FOR BEST PERFORMANCE HOOVER PRODUCTS STRONGLY RECOMMENDS USING CORRESPONDING DIES FOR EACH BRAND OF FASTENER, AS MANY BRANDS ARE CONFIGURED SLIGHTLY DIFFERENT FROM ONE ANOTHER.

HOOVER PRODUCTS OFFERS A SELECTION OF DIES FOR VARIOUS SETTING APPLICATIONS FOR THE FOLLOWING BRANDS.

BRANDS	24L SNAPS	20L SNAPS	24L/20L SPRING SNAPS	PRONG SNAPS	GROMMETS	SELF PIERCING GROMMETS
CRUISER					YES	
DOT	YES	YES		YES		
FASNAP	YES	YES				YES
KANE			YES			
RAU	YES	YES				
ROME			YES			
SCOVILL	YES	YES		YES		
STIMPSON					YES	YES
STOCKO	YES	YES	YES			
UNIVERSAL			YES	YES		
VICAR	YES					